 


Packing List

UA I/O package includes this document and the following items:

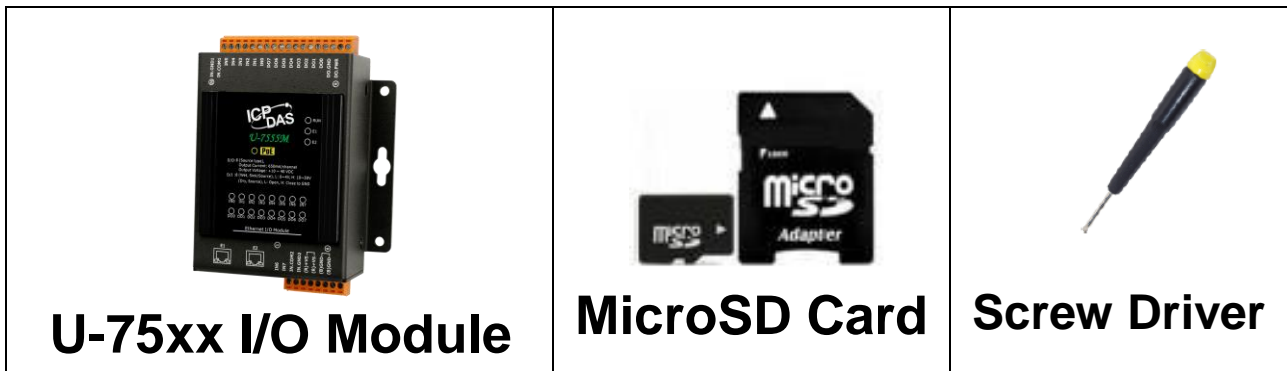 


Note: The MicroSD is already in the I/O module. It is used to install the FW. Do not remove it.

Technical Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

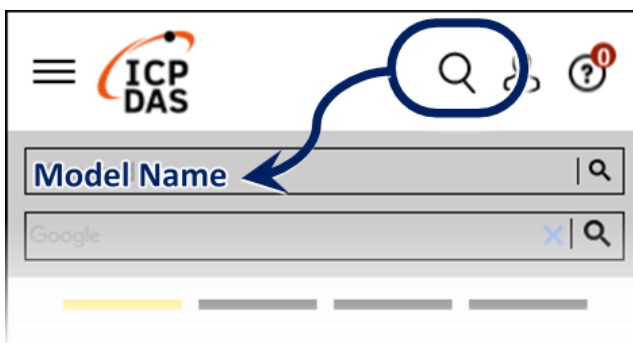

Technical Support

service@icpdas.com

<https://www.icpdas.com>

- For Desktop Web



 
 
1. Preparations for Devices

1. PC/NB: Can connect to the network and set the network
2. Ethernet Switch/Hub (Ex: NS-205A or PoE Switch NSM-208SE)
3. Power Supply: +12 ~ +48 VDC (Ex: MDR-60-24)

2. Hardware Connection

Connect the UA I/O Module with the RJ-45 Ethernet port to an Ethernet switch/hub (Fig.2 for PoE Switch) and PC. You can also directly link the U-75xx to PC with an Ethernet cable.

After power is connected, please **【wait 1 minute】** for U-75xx start-up procedure. When the "RUN" light starts flashing, it represents the boot is complete.

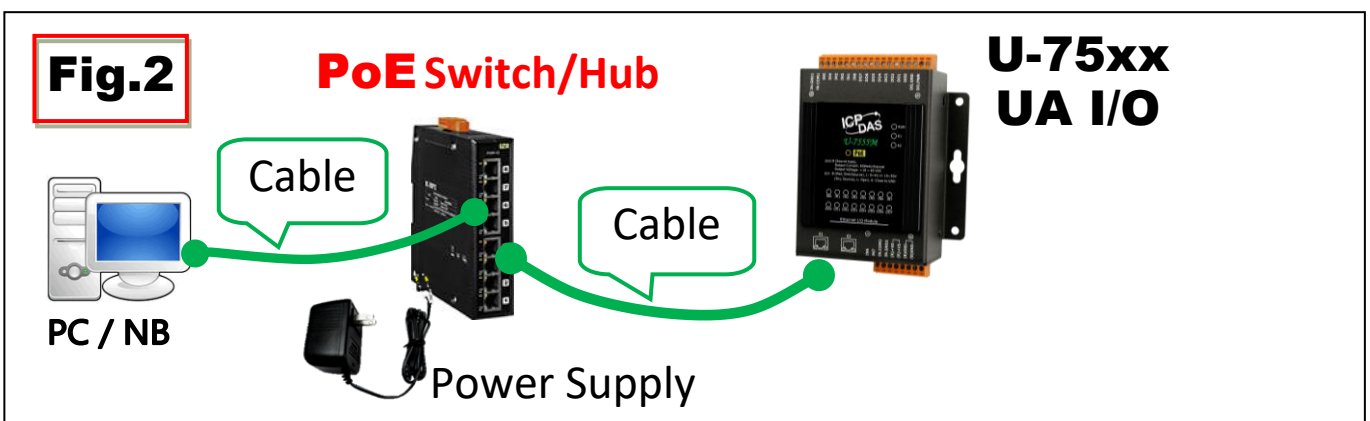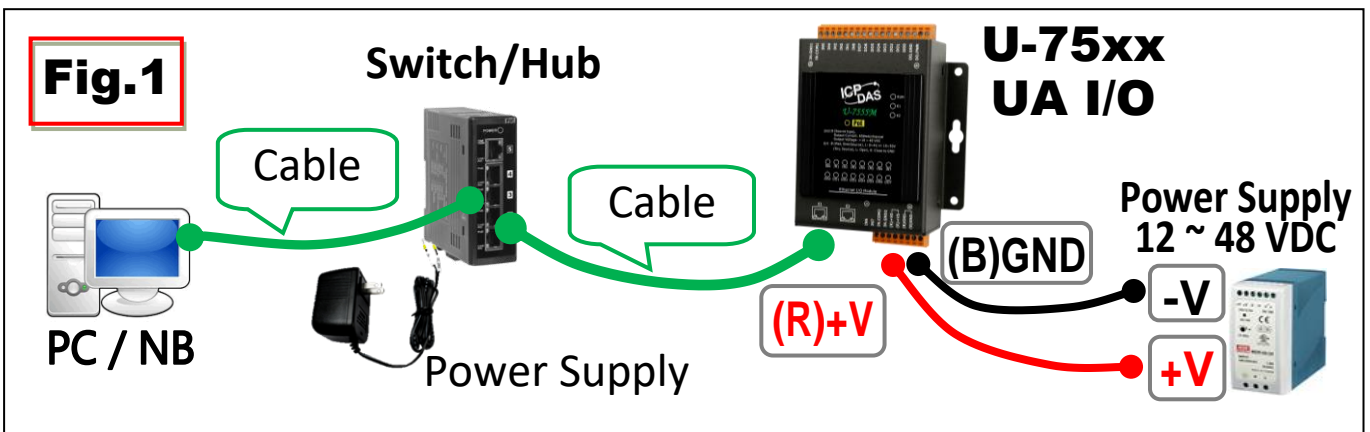

3. Network Connection


Factory Default Settings of U-75xx			
Network	IP	192.168.255.1	Assign U-75xx a new IP setting according to your case.
	Netmask	255.255.0.0	
	Gateway	192.168.1.1	
Web UI Account	Username	root	After login, change the username/ password at once.
	Password	root	

1. Change the **PC's IP** setting as following.

(Write down the **PC original** network settings before modify.)

IP	192.168.255.10
Subnet mask	255.255.0.0
Gateway address	192.168.1.1

 2. Make sure the PC and U-75xx is connecting through Ethernet. And then open a PC side browser (Ex: Chrome, IE...). Type **http://192.168.255.1** in the URL address. Use default Web UI username/password **root/root** to login.

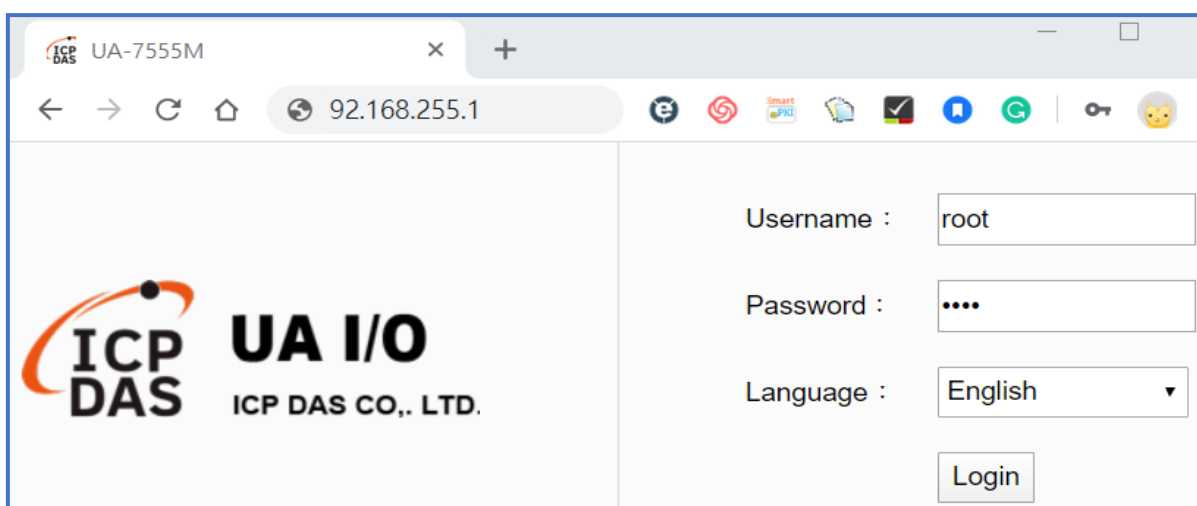

3. Change the Username/password in **【 Account Setting 】** of **【 System Setting 】** , or user cannot use any other function.

ICP DAS UA I/O ICP DAS CO., LTD.

System Setting Module Setting OPC UA Setting MQTT Setting Adva

Overview
Network Setting
Time Setting
Account Setting
Firmware Setting
Web Server Setting

Account Setting

Username	root
Password
Confirm Password

Save

4. Click **【 System Setting 】** → **【 Network Setting 】** > **【 Network Setting(LAN) 】** to change the IP settings by user network.

System Setting OPC UA Setting MQTT Setting

Overview
Network Setting
Time Setting
Account Setting
I/O Setting
I/O Status
Firmware Setting

Network Setting (LAN)

Connection Mode Specify an IP address.
 Obtain an IP address automatically.

IP Address	192	168	81	252
Mask	255	255	0	0
Gateway	192	168	1	1

MAC Address 00:0d:e0:b0:f0:00

Save

 
5. Save the IP settings, restore the PC original IP settings, and then type the **new IP/Username/Password** in the browser to login the Web UI of U-75xx to configure user's UA project.

● AI/AO Jumper Setting

To change the Selection Jumpers for Analog channels:

1. Remove the top case and upper board of the module, the selection jumpers are next to the connector.
2. Set up the **Jumper** corresponding to the type of voltage/current and input/output for each analog channel.

Voltage/Current Input/output Selection Jumper:

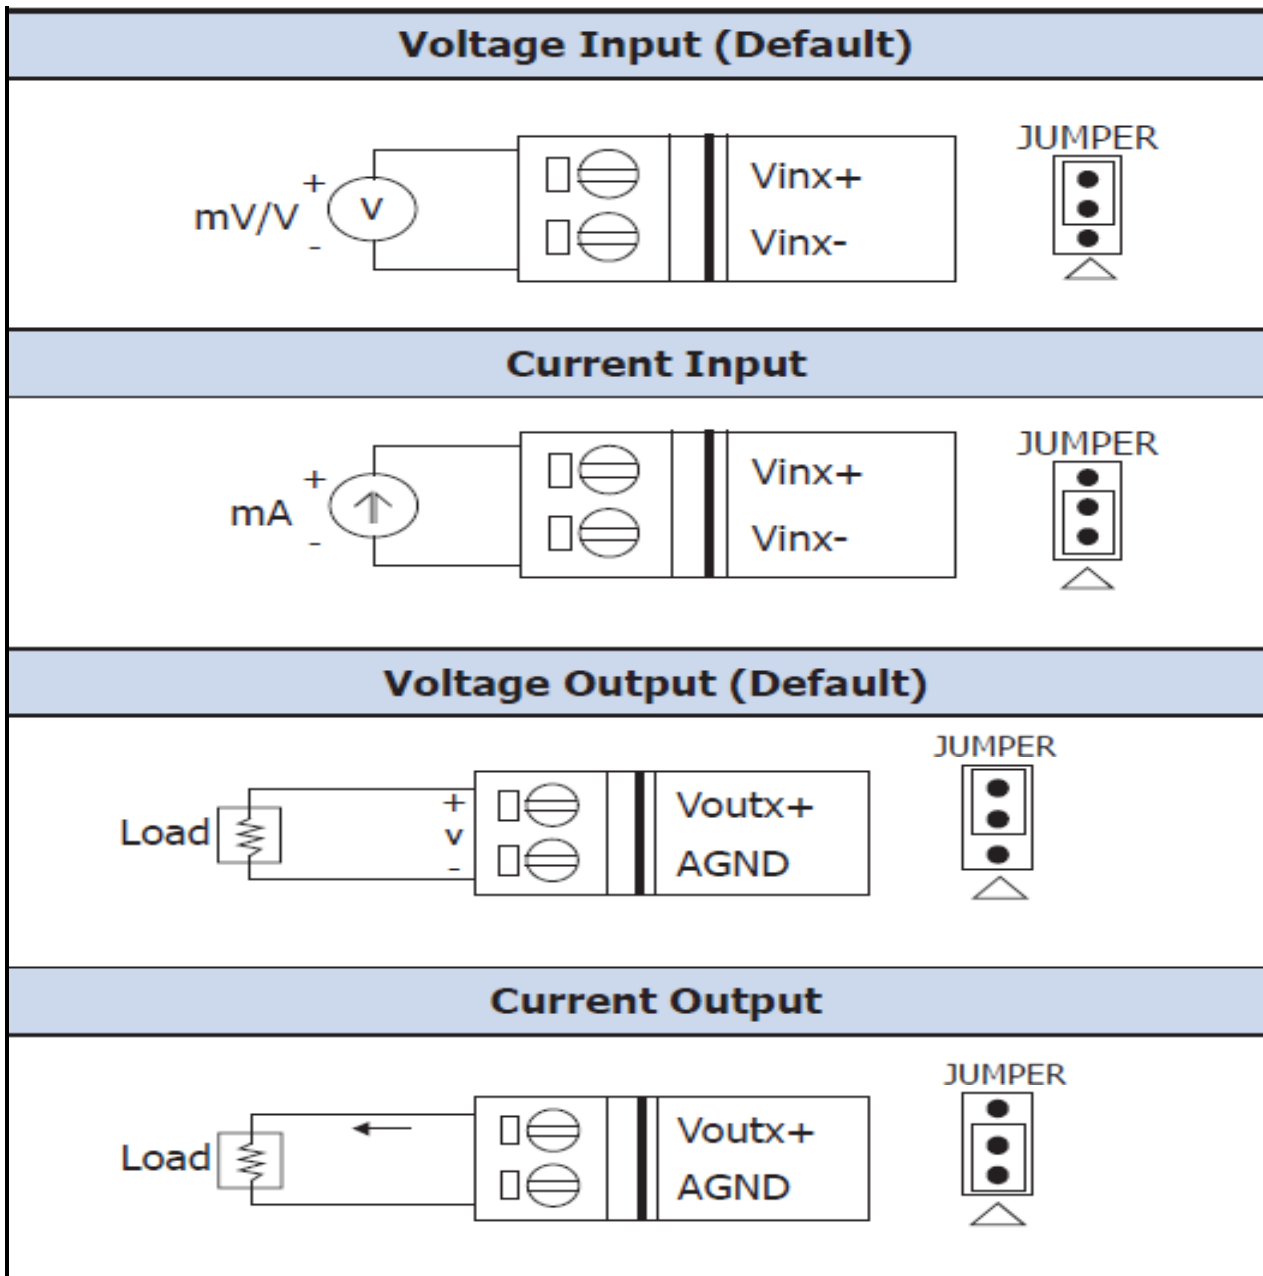


Jumper Location:

U-7504M								
Channel	Vin3	Vin2	Vin1	Vin0	Vout3	Vout2	Vout1	Vout0
Jumper	J4	J3	J2	J1	J8	J7	J6	J5

U-7526M								
Channel	Vout1	Vout0	Vin5	Vin4	Vin3	Vin2	Vin1	Vin0
Jumper	J8	J7	J6	J5	J4	J3	J2	J1

 Jumper Direction 

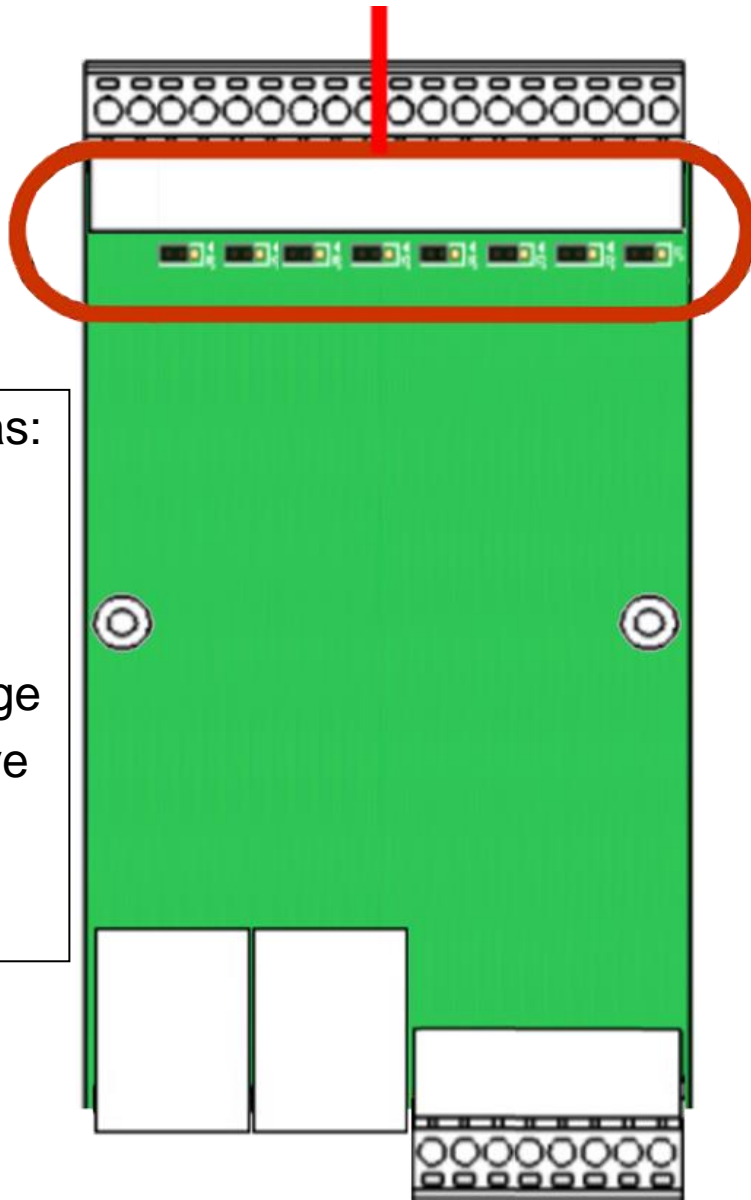

(Jumpers default as:
 Input : Voltage
 Output : Voltage.
 If you need to change
 the jumpers, remove
 the top case and
 upper board.)